



[Knowledgebase](#) > [Administration System](#) > [Geofences](#) > [View a citizen's position in relation to a geofence](#)

View a citizen's position in relation to a geofence

Mari Opstad - 2025-11-14 - [Comments \(0\)](#) - [Geofences](#)

View a citizen's position in relation to a geofence

This guide explains how to view a citizen's position in relation to a geofence in the Stella Care [Administration System](#). The feature helps you quickly assess whether the citizen is inside or outside their safety zone.

How to view a citizen's position in relation to a geofence

1. Go to the **Geofences** menu on the left side of the Administration System.
2. Find the geofence you want to work with and click its name in the list.
3. The map opens and shows the geofence's location and shape.
4. Click the button **Show position of citizens**.
5. The system now displays the citizens' current positions as points on the map.

What you can see on the map

- A citizen's marker is placed in relation to the boundaries of the geofence.
- If a citizen is outside the geofence, this will be clearly visible on the map.

Tips

- Use this feature when an alarm has been triggered to get a quick visual overview of the situation.
- Zoom in to see precise positions in densely built areas.

Related Content

- [Set up a time-controlled geofence](#)
- [Assign a geofence to a citizen](#)
- [Overview of geofences](#)
- [Track a Citizen's location in the Administration System](#)